


A1w

# RIM BOARD w/ Web Stiffeners

Fasten rim board to each floor  
I-Joist using one 8d box nail or  
10d box nail per flange

Same depth as I-Joist

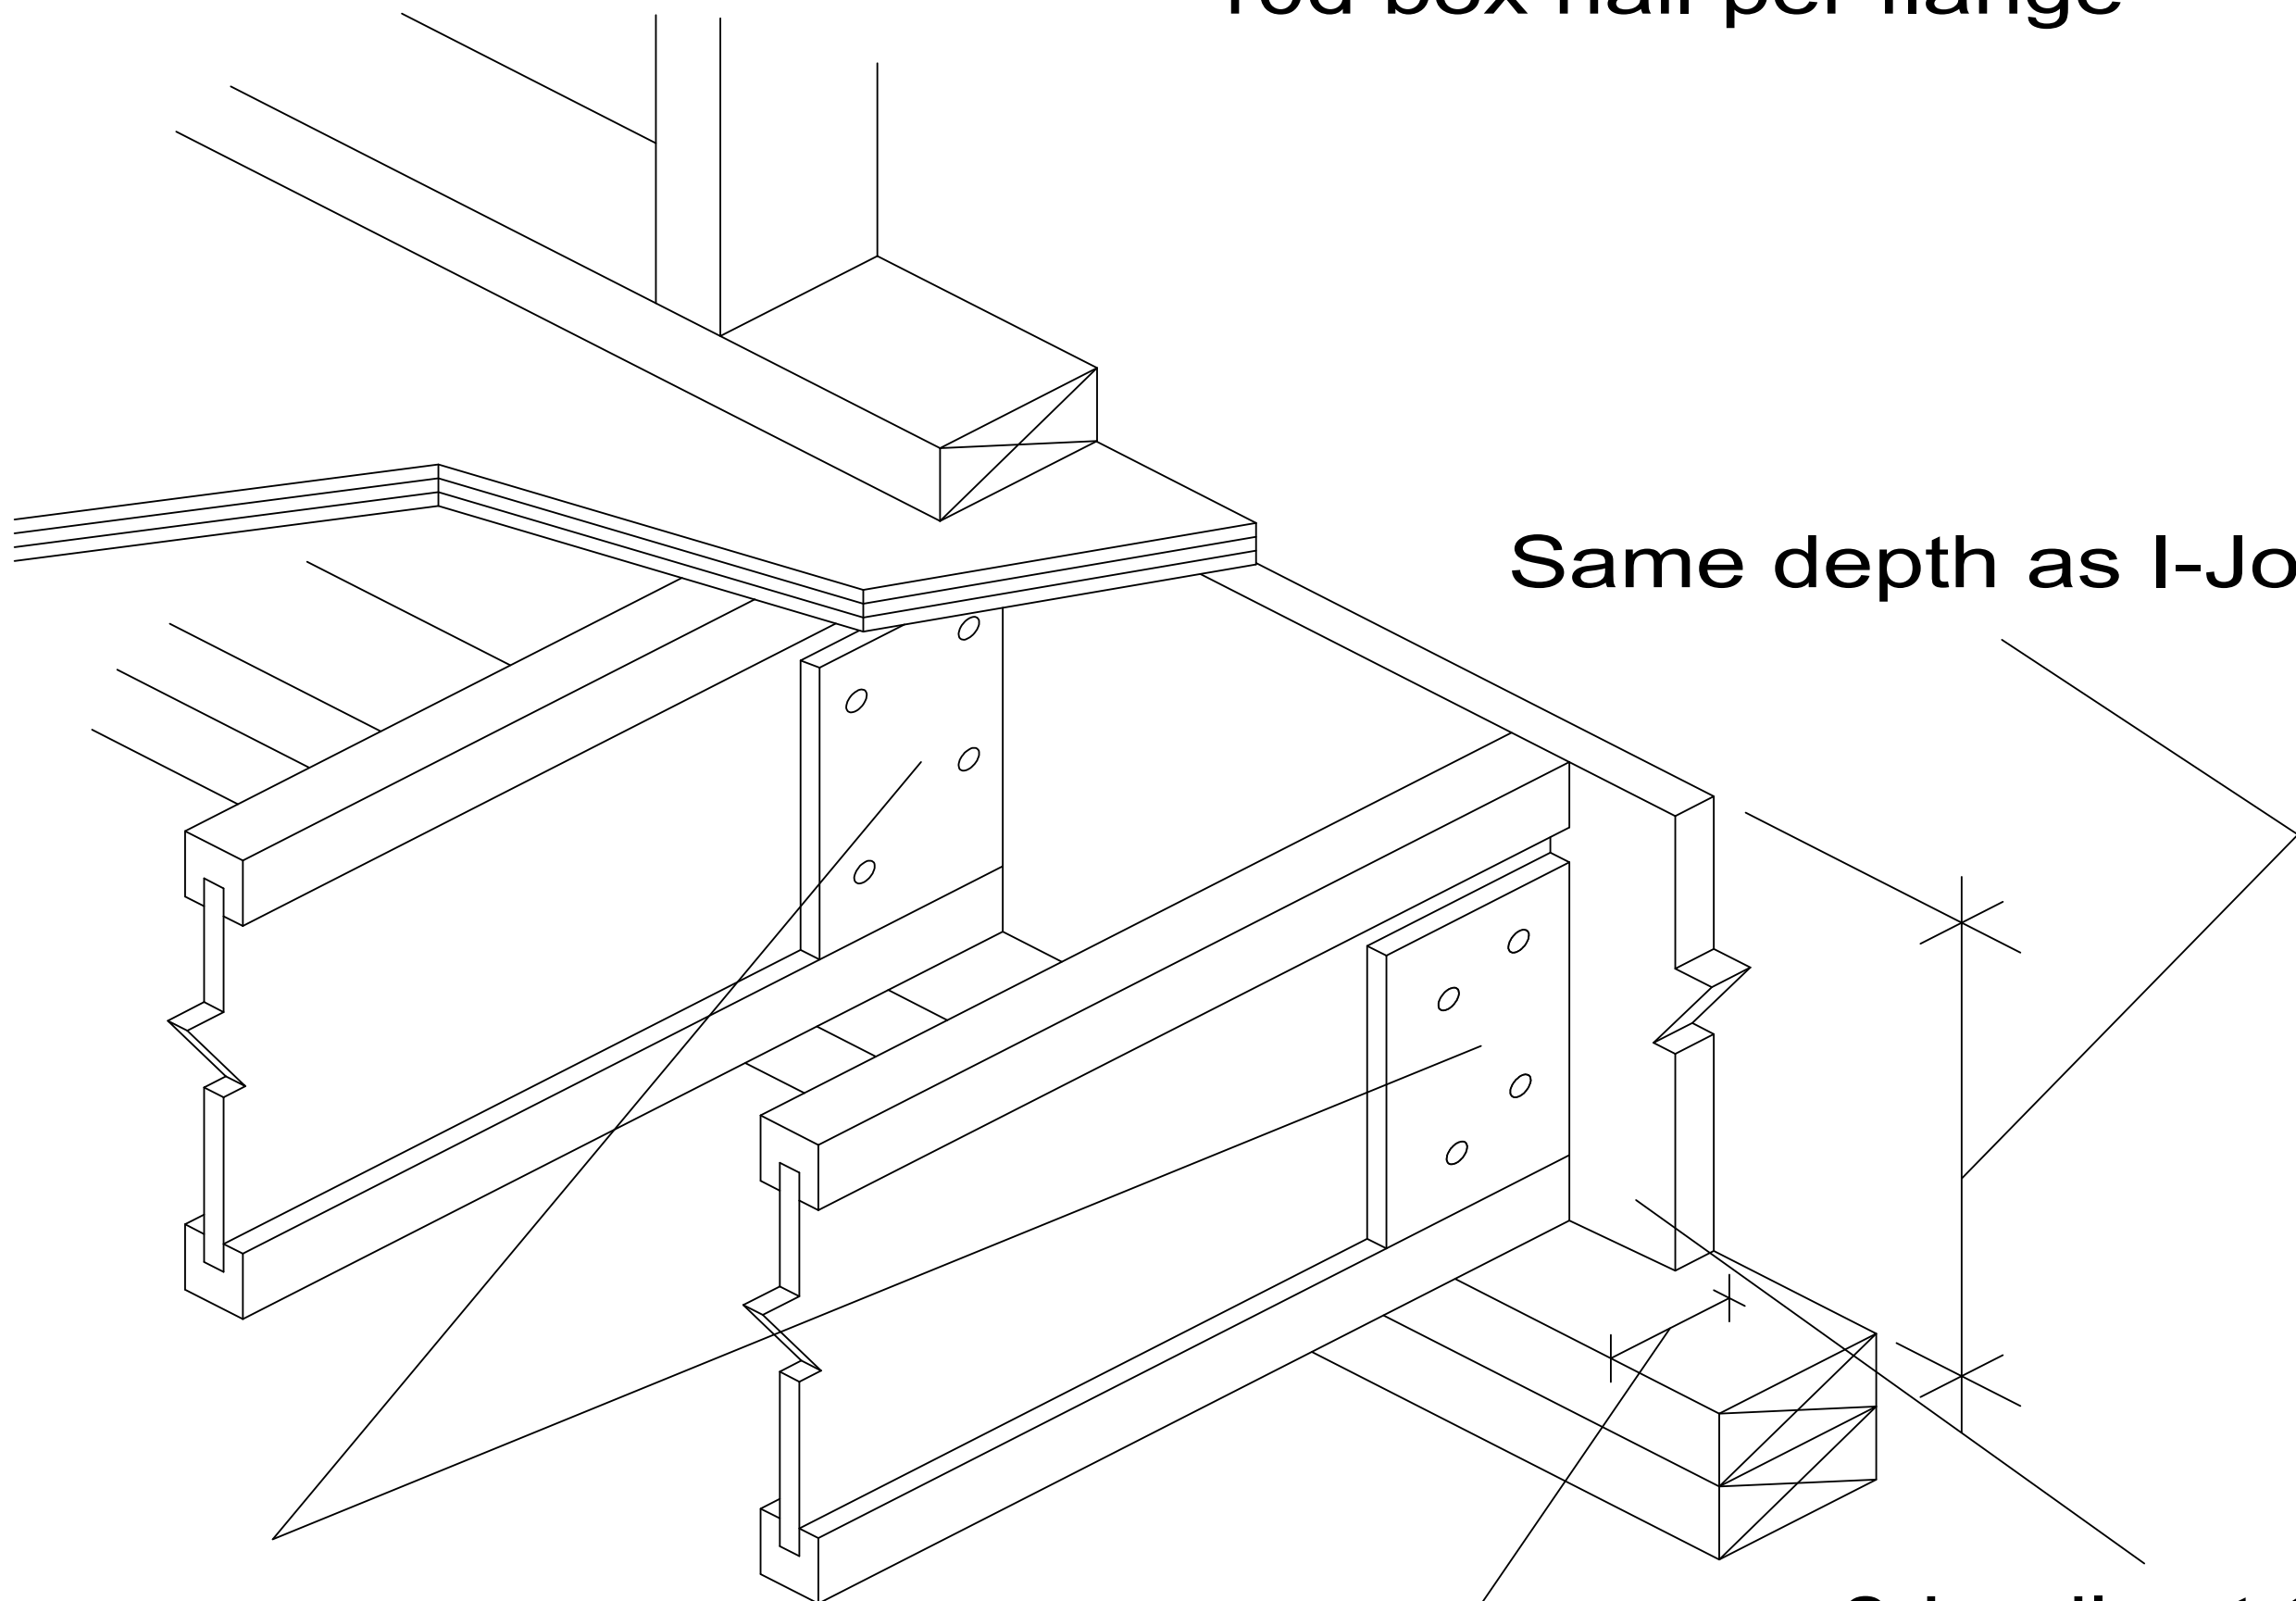

Web Stiffeners

Bearing  
Length

8d nails at 6" oc  
toe-nailed from  
outside of building