


B5

CHANGE IN JOIST DIRECTION at Interior Wall

Fasten OSB or LSL Rim Board to each floor I-Joist
using one 8d or 10d box nail per flange

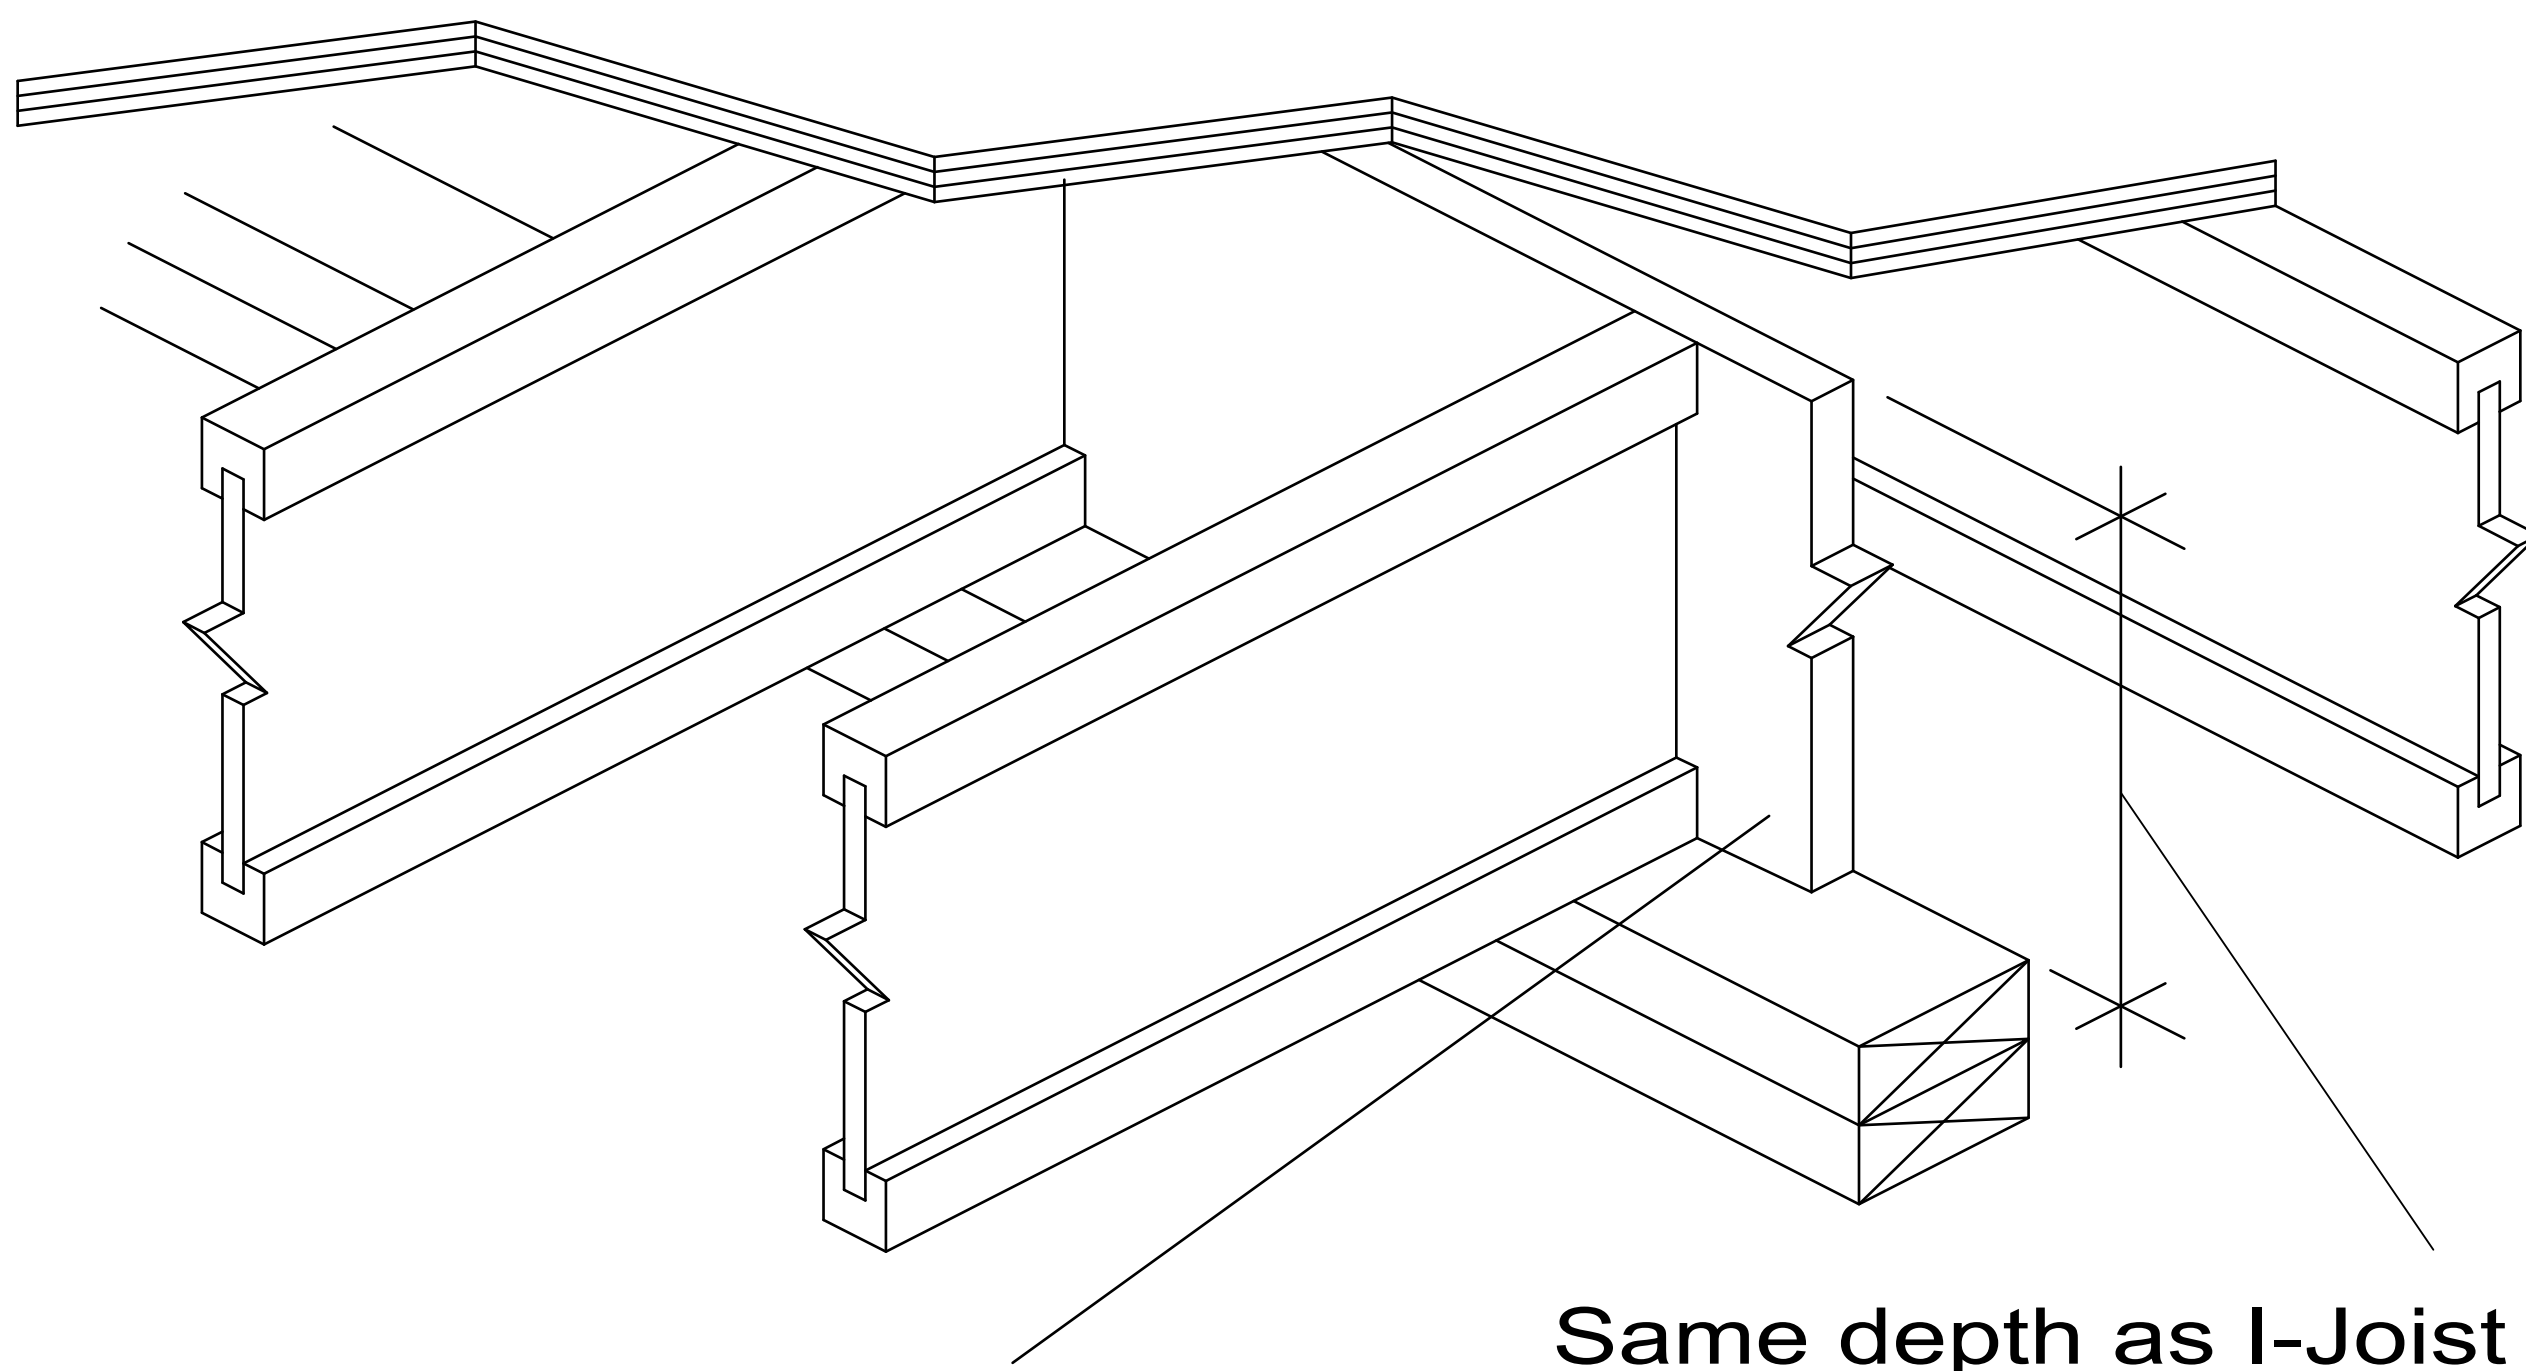

10d box nails at 6" oc toe-nailed
from side away from I-Joists