


C9b

## Brick-Ledge Cantilever Detail (No Reinforcement Required)

Web Fillers (See I-Joist Filler Schedule for filler block and web filler sizes.)

Full depth I-Joist, LVL, or OSB Rim blocking

Approved Connectors

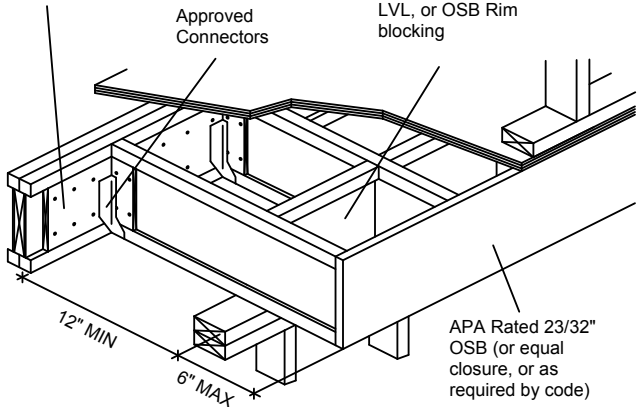

### Notes:

1. Verify the capacity of the cantilever. Additional reinforcement may be necessary as specified by the designer.
2. Verify the capacity of all supporting members.
3. For a double joists, attach the 2x4 block to the first I-Joist then attach the second I-Joist with the appropriate fillers as shown in Detail E5.
4. It is often cheaper and easier to replace supporting I-Joists, Filler Blocks, and Backer Blocks with LP Solid Start LSL or LVL