


**A7il**

# **RIM BOARD AS STARTER JOIST w/ Additional I-Joist and Ladder Blocking**

**8d nails at 6" o.c. toe-nailed  
from outside of building.**

(when used for shear transfer nail to  
bearing plate with same nailing schedule as decking)

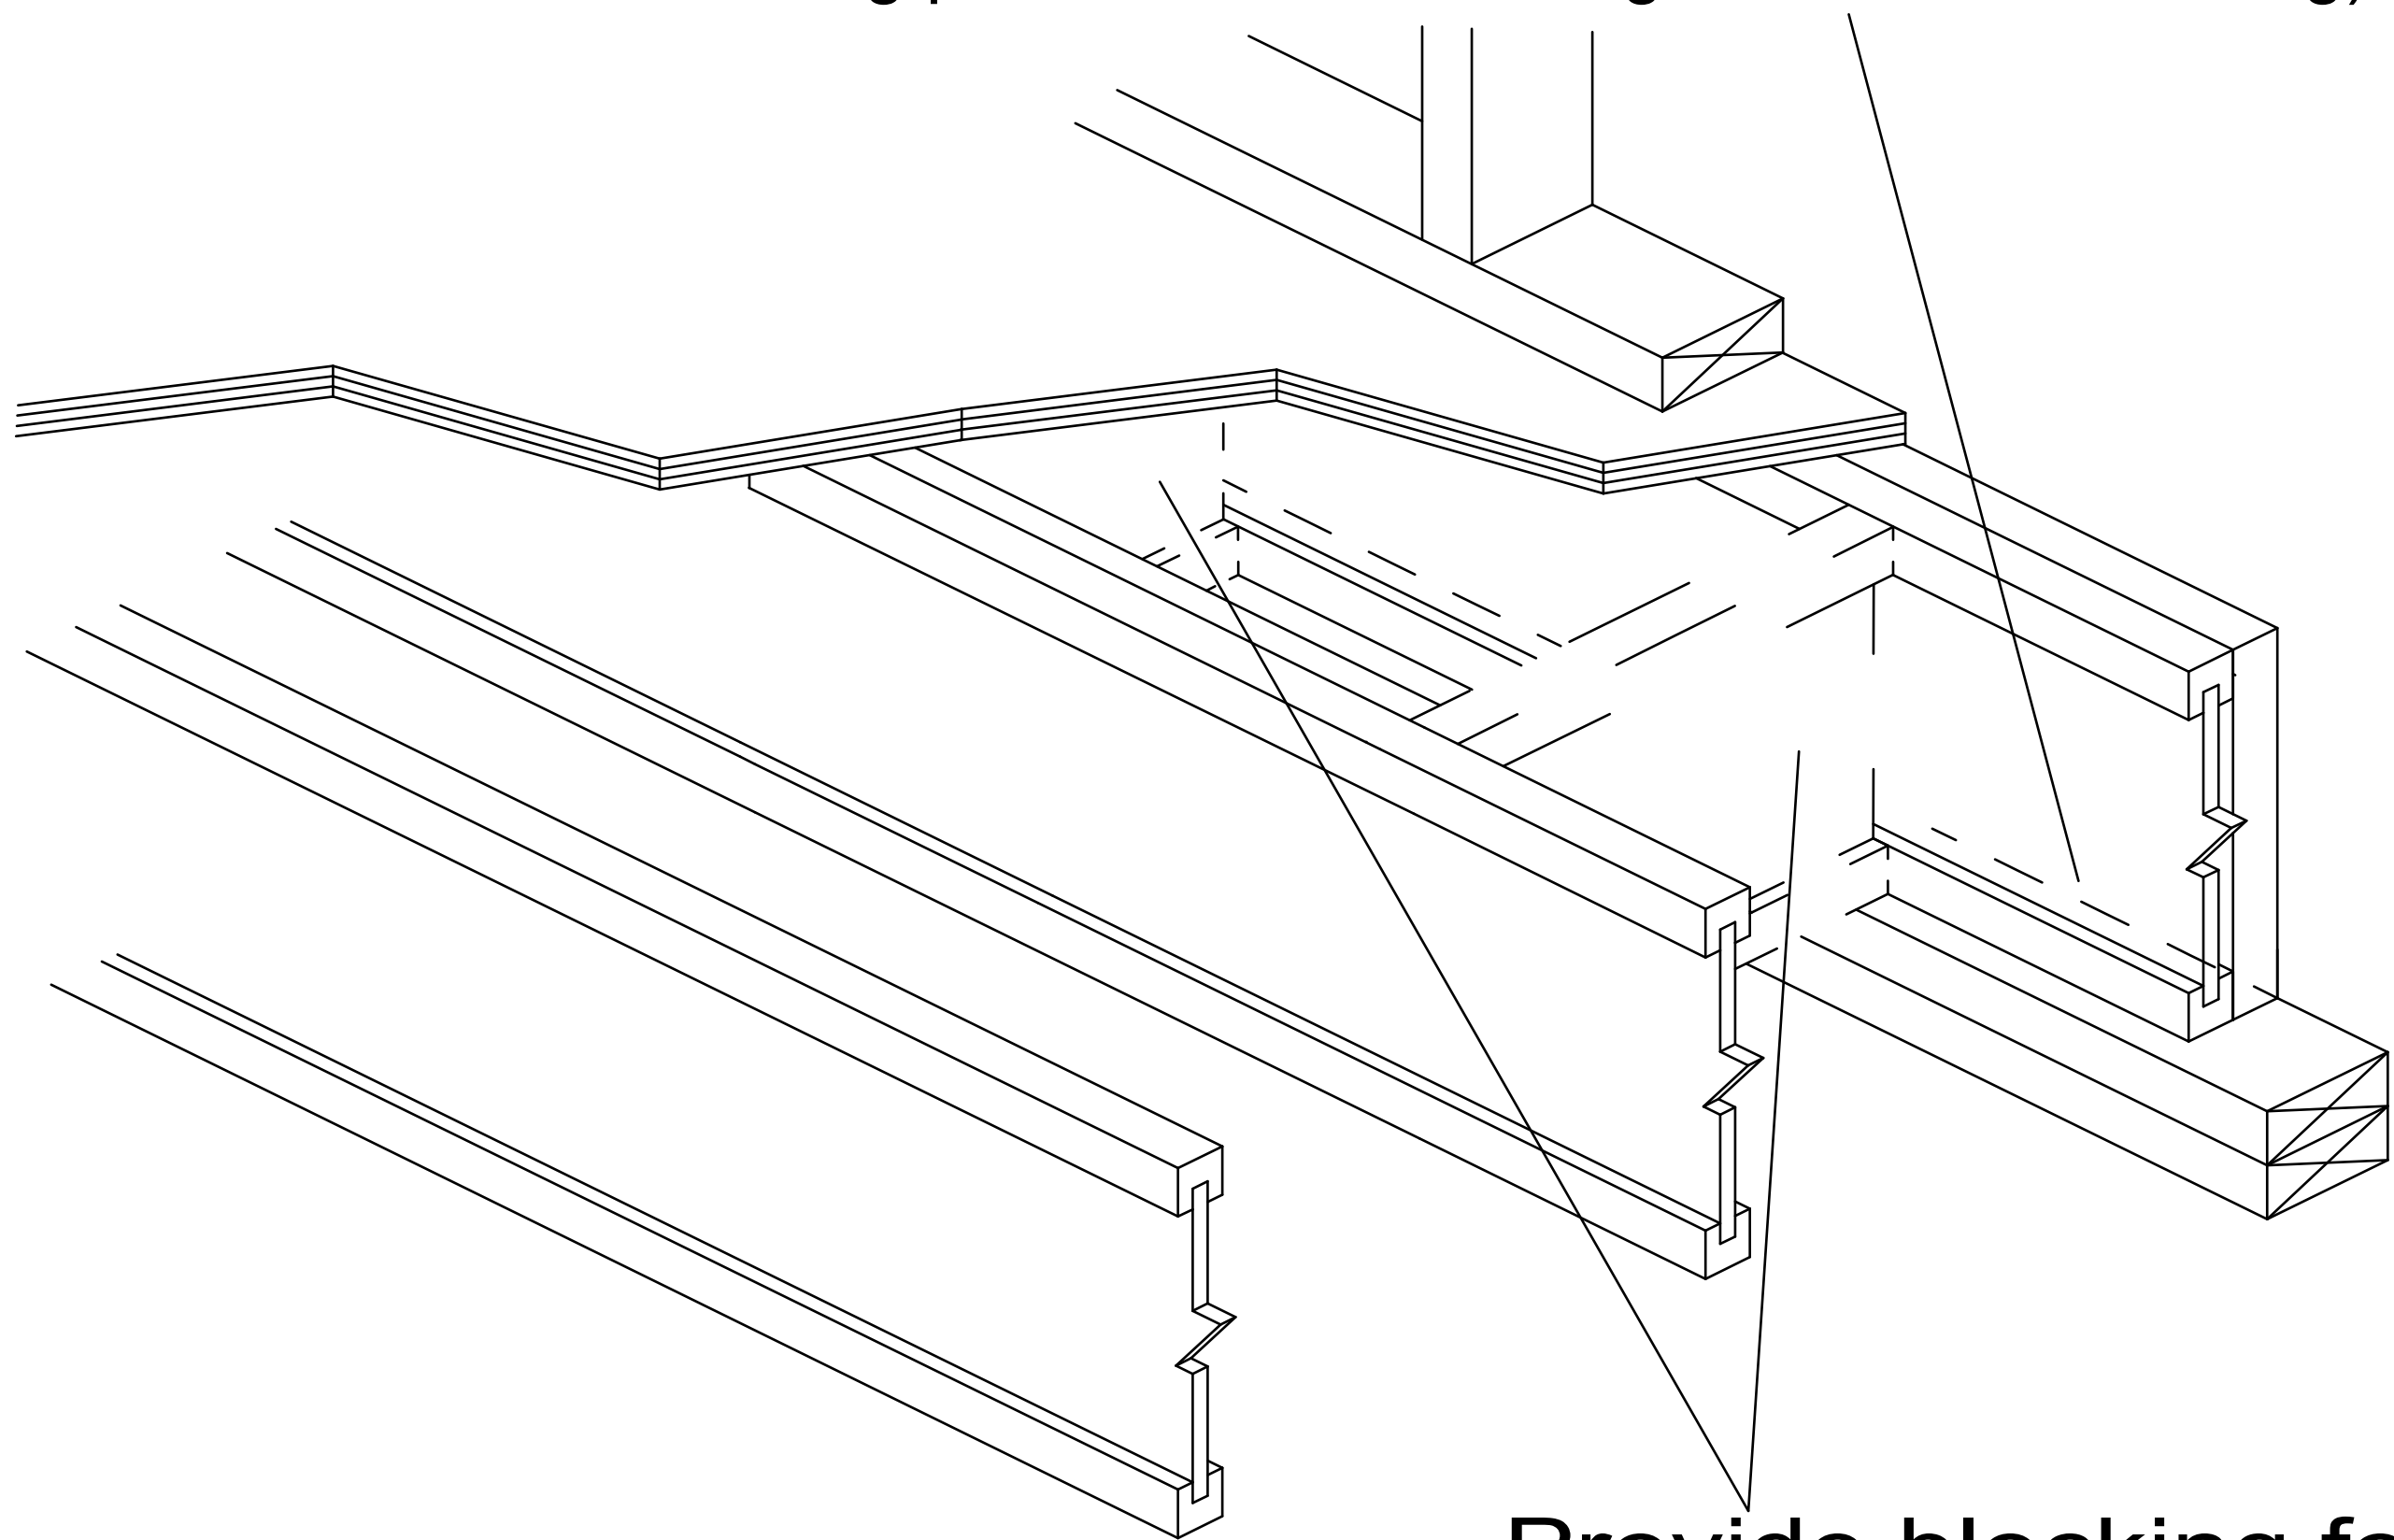

**Provide blocking for  
lateral support as required. Use LP I-Joist,  
LP LVL, LP LSL, or LP Rim Board as blocking**